Safety Information

CAUTION!
Invisible laser radiation when open. Avoid exposure to beam. Class I laser product. This system must be opened only by qualified technicians to prevent accidents caused by the laser beam.

LASER λ = 780 nm, P max = 5 mW
Rating Information: At bottom of the unit this unit comply with the existing requirements

CE In accordance with the rating plate of the unit, this unit complies with current standards concerning electrical safety and electromagnetic compatibility.

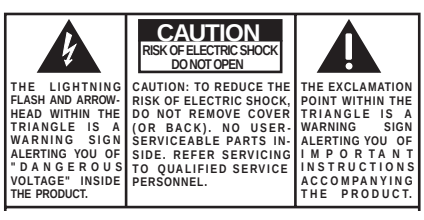

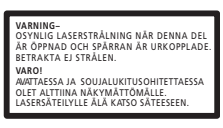

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

FCC Information

FCC Information
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Inc. could void the user's authority to operate this product.
This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception.
If this equipment does cause interference to radio or television reception (which you can determine by unplugging the unit), try to correct the interference by one or more of the following measures:
• Re-orient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
• Move the unit away from the equipment that is receiving interference.
• Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits.
If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies.
This product complies with DHHS Rules 21 CFR Subchapter J. Applicable at the date of manufacture.

For Your Records
In the event that service should be required, you may need both the model number and the serial number. In the space below, record the date and place of purchase, and the serial number:
Date of Purchase
Place of Purchase
Serial No.

Service Information
This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this Guide.

Technical specification
Product: Personal CD Player
Brand: RCA
Model: RP2700

Electrical Consumption
2 x "AA" Batteries

IMPORTER
Comercializadora Thomson de México, S.A. de C.V.
Álvaro Obregón No. 151. Piso 13.
Col. Roma. Delegación Cuauhtémoc
C.P. 06700. México, D.F.
Telefono: 52-55-11-020360
RFC: CTM-980723-KS5

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la class B est conforme à la norme du NMB-003 du Canada

Before you begin

Unpacking Your Unit
You should have the following:
- one main unit
- one set of ear bud phones
- one user's guide

CD Player

General Control

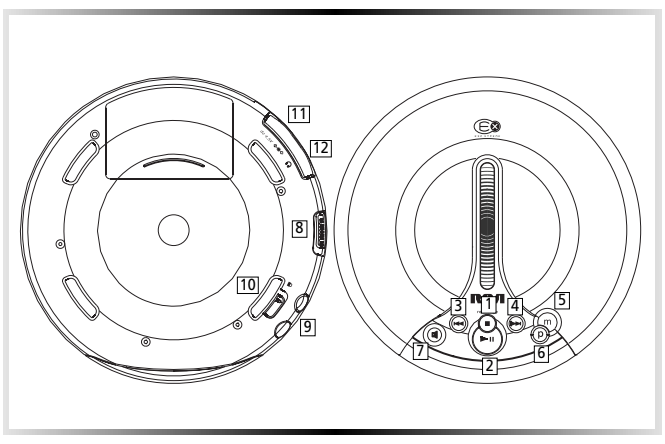

1. ■ **stop** button- Turns the unit off / stops CD playback.
2. ►II **play/pause** button - Turns on the unit, starts or pauses CD playback.
3. ⏮ - Skips / searches backward track.
4. ⏭ - Skips / searches forward track.
5. **m** button - Selects playmode.
6. **p** button - Enters program mode.
7. 🔊 - Selects music modes (EQ).
8. **open** switch - Slide to open CD door.
9. Volume buttons - Adjust the volume ("+" to increase and "-" to decrease volume).
10. Lock switch - Locks or unlocks the buttons.
11. DC jack - Connect with a power adapter for indoor use.
12. Line Out / 🎧 Headphones / remote Jack - Insert your headphones or remote here.

Power Supply

Battery Power Supply
Two "AA" batteries are required to power the CD player

AC/DC Outlet Power Supply adapter (not provided)
You can power your CD player with an AC/DC power adapter (4.5V DC, THOMSON adapter 5-4079B recommended). AC/DC power adapter is purposed for indoor use in dry rooms only. Remove the jack from the device to use it with the batteries.

Note:
Power is fed to the unit even when it is not functioning. To cut the power supply off, the AC/DC adapter must be unplugged.

Car (DC) Power Supply adapter (not provided)
Plug a car (DC) power supply adapter into the DC in 4.5V jack at the rear/side of the CD player and then into the cigarette lighter receptacle in your car.

Note

CD Player

The display

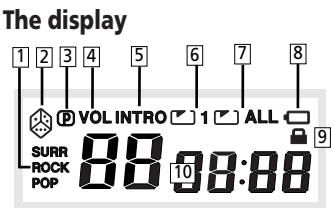

1. Music modes (SURR, ROCK, POP)
2. Random playback
3. Program mode
4. Volume
5. Intro playback
6. Repeat current track
7. Repeat all tracks
8. Low battery level
9. Player buttons are locked
10. Track number, playback time and volume level

Listening to a Compact Disc
Slide the **open** switch to the right to open the door. Insert a disc and press lightly on the center to lock. Close the door.

Playback
- Press **play/pause** ►II button on the main unit to start playback. **"- -"** will appear on the display followed by the total number of tracks and time of the CD.
- If the disc compartment is empty or the disc cannot be read, **diSC** or **Er** will appear on the display.

The **ELECTRONIC SHOCK PROTECTION*** system prevents sound interruptions when impacts or vibrations occur. Electronic anti-shock consumes less power and increases the battery life. Therefore, the **ESP** function is always **ON**.
After many successive impacts, the buffer might be emptied causing a brief sound interruption for the memory to reload.

Skip / Search
- Press ⏮ once to go back to the beginning of the current track. Press twice consecutively to skip to the previous track.
- Press and hold to search backward in a track.
- Press ⏭ to skip to the next track.
- Press and hold to search forward in a track.

Pause
- During playback, press **play/pause** ►II on the main unit to pause playback. The playback time flashes when interrupted.
- To resume playback, press **play/pause** ►II .

Stop
Press **stop** ■ on the main unit.

Music mode
Press 🔊 repeatedly to select among **Normal**, **Pop**, **Rock** and **Surround**.

Playmode
You can replay the entire CD or one track, listen to the tracks in random order and the beginning 10 seconds of each track.

In CD mode, press **m** repeatedly to:
1 - replay the current track.
ALL - replay all tracks.
INTRO - play the beginning 10 seconds of each track.
🔀 - play tracks randomly.

Program
This function lets you listen to the tracks you selected in the order you want. You can program up to 20 tracks.

1. Press **p** to enter program mode. P shows on display.
2. The first unoccupied program location will show on the display, e.g. "01".
3. Press ⏭ or ⏮ to select a track into the program .
4. Press **p** to confirm your selection.
5. Repeat steps 2 to 4 to select more tracks.
6. Press **play/pause** ►II to listen to your programming.

Cancel Program
Program will be cancelled when you change disc or turn off the unit.

Exit Program mode
To exit program mode, press **stop** ■
Press **p** to enter program mode again.

Lock
Slide the **lock** switch on the main unit to **HOLD** position to lock the buttons on the main unit to avoid accidental activation of unwanted functions.
Lock icon will show on the display when the buttons are locked.

Note:
Remember to slide the **lock** switch to ON position to activate the control again.

Note:
To prevent excessive battery consumption, the unit switches off automatically in all modes (except during playback) after 30s if no key has been activated.

More Information

Clean the player with a soft cloth, or a damp chamois leather. Never use solvents.

Useful advice
- Do not store CDs in damp areas.
- Do not expose CDs to high temperatures.
- Do not put any tape or adhesives on either side of the disc.
- You should avoid leaving the CD door open. Dust is liable to impair performance of the laser optical unit.
- Do not use your set immediately after transport from a cold place to a warm place: there may be condensation problems.
- Do not touch the playing surface. Make sure that you keep your set away from water and high temperatures.
- If you do not use your set on battery power for more than one month, we advise you to take out all the batteries.
- To prevent personal injury, do not reverse any battery and do not mix battery types.
- Discard leaking batteries immediately. Leaking batteries can cause skin burns or other personal injury.
- This apparatus shall not be exposed to dripping and splashing.
- Prolonged use of the CD player at full volume can damage the user's ear.

Notes on CD-R/RW Discs
- Do not affix any type of labels to either side (recordable or labeled side) of a CD-R/RW disc as this may result in the unit malfunctioning.
- To avoid damages to the CD-R/RW disc, do not open the disc compartment door while the disc is being read.
- Do not load an unrecorded CD-R/RW disc into the unit. This may take a longer time to read the disc.
- Playback capability for CD-RW discs may vary due to variations in the quality of the CD-RW disc and the recorder used to create the disc.

Please respect the environment !
Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling.

Headset Safety
Have a Blast- Just Not in Your Eardrums
Make sure you turn down the volume on the unit before you put on headphones. Increase the volume to the desired level only after headphone is in place.
- Do not play your headset at high volume. Hearing experts warn against extended high-volume play.
- If you experience ringing in your ears, reduce volume or discontinue use.
- You should use with extreme caution or temporarily discontinue use in potentially hazardous situations. Even if your headset is an open-air designed to let you to hear outside sounds, do not turn up the volume so high that you are unable to hear what is around you.

Technical specifications
*** Frequency response: 20Hz to 20kHz**

Power Supply
• 4.5V DC through AC/DC adapter
• 2 "AA" batteries
• 4.5V DC (through car DC adapter)

The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible, we reserve the right to make any improvement or modification without prior notice. The English version serves as the final reference on all products and operational details should any discrepancies arise in other languages.

RCA

user manual

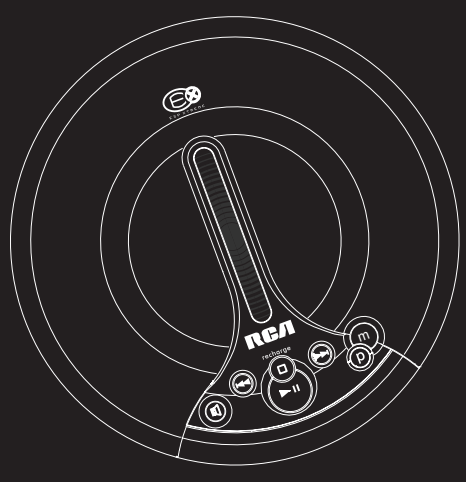

RP2700

IT IS IMPORTANT TO READ THIS INSTRUCTION BOOK PRIOR TO USING YOUR NEW PRODUCT FOR THE FIRST TIME.
ES IMPORTANTE LEER ESTE MANUAL ANTES DE USAR POR VEZ PRIMERA SU EQUIPO.

IMPORTADOR
Comercializadora Thomson de México, S.A. de C.V.
Álvaro Obregón No. 151. Piso 13.
Col. Roma. Delegación Cuauhtémoc
C.P. 06700. México, D.F.
Telefono: 52-55-11-020360
RFC: CTM-980723-KS5

Thomson Inc.
P.O. Box 1976
Indianapolis, IN 46206-1976
© 2005 Thomson Inc.
Trademark(s) ® Registered
Marca(s) ® Registrada(s)
Marque(s) ® Deposée(s)
www.rca.com
Printed In China / Impreso en China

5616 789A (EN/F/E)

U.S. Limited Warranty

What your warranty covers:
• Defects in materials or workmanship.

For how long after your purchase:
• One year from date of purchase.
The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

What we will do:
• Provide you with a new, or at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.
• Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

How to make a warranty claim:
• Properly pack your unit. Include any cables, etc., which were originally provided with the product. We recommend using the original carton and packing materials.
• Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

Thomson Inc.
Product Exchange Center
11721 B Alameda Avenue
Socorro, Texas 79927

• Insure your shipment for of loss or damage. Thomson accepts no liability in case of damage or loss en route to Thomson.
• Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
• A new or refurbished unit will be shipped to you freight prepaid.

What your warranty does not cover:
• Customer instruction. (Your Owner's Manual provides information regarding operating Instructions and user controls. For additional information, ask your dealer.)
• Installation and setup service adjustments.
• Batteries.
• Damage from misuse or neglect.
• Products which have been modified or incorporated into other products.
• Products purchased or serviced outside the USA.
• Acts of nature, such as but not limited to lightning damage.

Product Registration:
• Please complete and mail the Product registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

Limitation of Warranty:
• THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
• REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How state law relates to this warranty:
• Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
• This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your product outside the USA:
• This warranty does not apply. Contact your dealer for warranty information.

Canadian Limited Warranty

Thomson multimedia Ltd. warrants to the purchaser or gift recipient that if any manufacturing defect becomes apparent in this product within 1 year from the original date of purchase, it will be replaced free of charge, including return transportation.
This warranty does not include damage to the product resulting from accidents, misuse or leaking batteries.
Should your product not perform properly during the warranty period, either:
1. Return it to the selling dealer with proof of purchase for replacement,
OR
2. Remove the batteries (where applicable), and pack product complete with accessories in the original carton (or equivalent).
— Mail prepaid (with proof of purchase) and insured to:

Thomson multimedia Ltd.
6200 Edwards Blvd.,
Mississauga, Ontario, L5T 2V7
Canada

The provisions of this written warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies contained in any applicable legislation, and to the extent that any such provisions purport to disclaim, exclude or limit any such statutory warranties and other rights and remedies, such provisions shall be deemed to be amended to the extent necessary to comply therewith.
If you are unable to find a qualified servicer for out of warranty service, you may write to:

Thomson Inc.
P.O. Box 0944
Indianapolis, Indiana, U.S.A., 46206-0944

Attach your sales receipt to this booklet for future reference. This information is required if service is needed during the warranty period.

PURCHASE DATE

NAME OF STORE

Garantía limitada (para México)

RED NACIONAL DE SERVICIO
RCA

Centro de Servicios Autorizados Express (servicio en 24 horas)

México, D.F.	*Guadalajara, Jal.*	*Monterrey, N.L.*
Digital Service Vallejo	**Servicio Especializado de Jalisco**	**Audio Estéreo Aguilar**
Av. 3 A No. 12, Local 2 Col. Santa Rosa México, D.F. Tels (55) 53677347 y 53677349 Tel/Fax (55) 53889621	Enrique Díaz de Leon No. 821 Col. Sagrada Familia Guadalajara, Jal. Tel (33) 31267431, 31267430 38253229, 38258262	Gral. Zuazua 736 Nte. Col. Centro Monterrey, N.L. Tel (81) 83724989 83755884

AGUASCALIENTES

Electrónica JIMSA
Av. Adolfo López Mateos No. 230 Ote.
Col. Centro
Aguascalientes, Ags. C.P.2000
Tel. (449) 915 5181; 978 0757
Fax. (449) 915 8100

BAJA CALIFORNIA NORTE

Electrónica General Internac
Blvd. Insurgentes No. 16174, Loc. 2AC.
Plaza de Abastos Los Almos
Tijuana, BCN C.P. 22440
Tel. / Fax: (664) 6212215

Baja Electronics
Hacienda de Corralejo No. 2099
Col. Hidalgo
Mexicali, B.C.N. C.P. 21389
Tel/Fax (686) 5619618, 5619808

BAJA CALIFORNIA SUR

Digital Sound
16 de Septiembre No. 390
Col. Centro
La Paz, Baja California Sur
Tel/Fax (612) 1232017

Video Servicio Beluz
Carretera a todos Santos No. 32
Col. Infonavit Las Brisas,
Los Cabos san Lucas, BCS C.P. 23410
Tel/Fax (624) 14313 65

CAMPECHE

Videoservicio
Av. López Mateos No, 24
Col. Barrio Sn. Roman,
Campeche, Camp. C.P.24040
Tel. (981) 816 3333
Fax. (981) 811 0669

CHIAPAS

KC Video
10a. Norte Oriente No. 153A
Col. Centro
Tuxtla Gutiérrez, Chis. C.P. 29000
Tel/Fax (961) 618 1908; Tel. (961) 618 3643

Serv. Elec. Especializado
Cuahutémoc No. 2A
Col. Centro. C.P. 29200
San. Cristóbal de las Casas, Chis.
Tel/Fax, (967) 6781355

Ele Aplicada Serv Digitales
4a. Av., Sur No. 51
Col. Centro, C.P. 30700
Tapachula, Chis.
Tel. (962) 6266998
Fax. (962) 6266953

CHIHUAHUA

Zener Electrónica
Av.Teofilo Borunda Sur # 300
Col. Centro
Chihuahua, Chih., C.P., 31000
Tel/Fax (614) 4371901 Tel (614) 4371902

Electrónica Union
Laguna de Tamiahua 7255 local 13
Col.Infonavit San Lorenzo. C.C.Calesa
Cd.Juárez, Chihuahua C.P.32420
Tel/Fax: (656) 6177890

Electronica Tony
Av. Tercera Pte. No. 213
Col. Centro
Cd. Delicias, Chihuahua
Tel/Fax (639) 4743026

Taller Electrónico Tony
20 de Noviembre No. 1521
Col. Centro,
Cd. Camargo, Chihuahua. C.P.
Tel/Fax (639) 4743026

COAHUILA

Electrónica Profesional
Blvd. Francisco Coss No. 450-1
Col. Centro
Saltillo, Coah C.P. 25000
Tel/Fax (844) 4123044

Audio y Video Electronica
Miguel Blanco 307-A
Col Zona Centro,
Mondova, Coahuila. C.P. 25700
Tel/Fax (866) 6339406

Vacom
Av. Morelos 1016 ote.
Col. Centro
Torreón, Coah, C.P. 27000
Tel. 01 871 718 39 05, 7 22 15 51
Fax. 01 871 718 11 98

Serel, S.A.
Calle Nueva No.307
Col. González
Piedras Negras, Coahuila. C.P.26000
Tel/Fax (878) 7827104

Multiservicios del Norte
5 de Mayo 295 Sur.
Col. Centro
Sabinas, Coahuila. C.P. 26700
Tel/Fax (861) 6126431

COLIMA

TV. Servicio Saturno
Ngromante No. 136 Altos
Col. Centro
Colima, Col. C.P. 28000
Tel/Fax (312) 3145554, Tel (312) 3145000

Centro De Rep. Electrónicas
Tucanes # 66 Barrio 5
Col. Valle de las Garzas,
Manzanillo, Col. C.P.
Tel (314) 3323004
Tel/Fax (314) 3354667

DISTRITO FEDERAL

Laboratorio Electrónico.
Retorno 52 Cecilio Robelo, Edif 1, Loc16-02
Col. Jardín Balbuena
México, D.F.
Tel/Fax (55) 57620264, 57626494

ADE Electrónica
Corea No. 79
Col. Romero Rubio
México D.F. C.P. 15400
Tel/Fax (55) 57027223

Electro Digital.
Av. Tláhuac No. 4798
Barrio de S. Sebastian Tulyehualco Xoch.
México D.F.
Tel/Fax (55) 21614639

SIMEL
Río Churubusco No. 2215
Col. Agrícola Oriental
Mexico, D.F., C.P. 08500
Tel. (55) 57563785
Fax, (55) 57560883

CICOSA
Ahuizotl # 94
Col. La Preciosa
México, D.F. C.P.02460
Tel. 5347 0302, 5561 6943
Fax: 5532 0663

Novatron.
Diag. San Antonio No. 1213
Col. Narvarte
México, D.F. C.P. 03020
Tel (55) 56390812
Fax (55)56391184

Premium Technical Support
Calzada Taxqueña # 1423
Col. Campestre Churubusco
México, D.F.
Tel. 53362467

Centro de Servicio Electrónico
Nicolás San Juan 806 P.B.
Col. Del Valle
México, D.F. C.P.03100
Tel. 5536-2575, 5536 7103
Fax. 5687-1305

DURANGO

Macroservicios.
Calle Patoni No. 105 sur.
Col. Centro
Durango, Dgo.
Tel/Fax (618) 812 26 86

ESTADO DE MEXICO

Digital Service Prensa
Prensa No. 1253
Col. Prensa Nal. Ind. Vallejo.
Tlanepantla, E.D.M. C.P. 54170
Tel. (55) 55877599 y 55673972
Fax: (55) 55678971

SHUREE Electrónica
Av. De los Maestros No. 113A
Col. Pensiones, C.P. 50060
Toluca, EDM.
Tel (722) 2149330, 2133424

TV Servideo
Oriente 9 No, 182
Col. Reforma
Cd. Neza, Edo, De Mex. C.P. 57840
Tel (55) 58572547
Fax (55) 58576399

Electrónica CIS
Reforma No. 36
Col. Centro
Chalco, Edo, de Mex, C.P. 56600
Tel/Fax (55) 3092 3060

GUANAJUATO

Tecnologia Electrónica
Blvd. Adolfo López Mateos No. 2820B
Col. Haciendas El Rosario
León, Gto. C.P. 37130
Tel/Fax (477) 4702701

Electrónica Siglo XXI
Naranjo No. 950
Col. Flores Magón.
Irapuato, Guanajuato, C.P. 36180
TEL/FAX: (462) 626 9823, 660 1238

Tele Servicio Chucho.
Blv Adolfo López Mateos No 510 Pte
Col. Centro, C.P. 38000
Celaya, Gto.
Tel/Fax (461) 6130591

Tele Radio Ortega.
Av. 16 de Septiembre No. 1076
Col. Centro, C.P. 38600
Acambaro, Gto.
Tel/Fax (417) 1720780

GUERRERO

Nueva Elec. Auditron
Aquiles Serdán No. 14B
Col. Centro
Acapulco, Gro. C.P. 039300
Tel (744) 4826242
Tel/Fax (744) 4832062

Ingeniería Electrónica
Antonia Nava de Catalán No.17
Col. Centro
Chilpancingo, Gro. C.P.39000
Tel. (747) 4717273
Tel/Fax. (747) 4948365

HIDALGO

Servicio Electrónica Avanzada
Plaza Comercial Quinta Bonita Loc.11
Fraccionamiento Quinta Bonita
Pachuca, Hgo, C.P. 42083
Tel/Fax (771) 7132436

Electrónica Especializada
Independencia No. 102 Loc. C
Col. Centro. C.P. 43600
Tulancingo, Hgo.
Tel/Fax (775) 7552654 Tel (775) 7539120

JALISCO

Serv. Esp. De Jalisco
Ignacio Ramírez No. 567
S.H. Sta. Teresita
Guadalajara, Jal. C.P. 44200
Tel/Fax (33) 38253229 Tel (33) 38270721

Electrónica Integral
Candelaria No. 202, Esq. Analco
Col. Sta. María
Puerto Vallarta, Jal. C.P. 48348
Tel (322) 2243736
Tel/Fax (322) 2248590

Setesa
5 de Febrero No. 2786
Col. Rancho Blanco
Tlaquepaque, Jalisco. C.P. 44890
Tel (33) 36354404
Tel/Fax (33) 36351875

MICHOACAN

Alka Electrónica
García de León No. 271
Col. Chapultepec Sur,
Morelia, Mich. C.P. 58260
Tel (443) 3148521, 3159038
Tel/Fax (443) 3159425

Centro Electrónico
Justo Mendoza No. 12
Col. Centro
Uruapan, Mich. C.P. 60000
Tel (452) 5243778, 5240838
Tel/Fax (452) 5248909

Multiserv Prof. Zamora
Cotzo No. 181-1 Ote.
Col. Centro
Zamora, Mich. C.P. 59600
Tel/Fax (351) 5155416

MORELOS

Electrónica Hertz
Insurgentes No. 190
Col. Emiliano Zapata
Cuautla, Mor. C.P. 62744
Tel/Fax (735) 3538410

Electrónica Hertz
Libertad No. 130,
Col. Carolina
Cuernavaca, Mor. C.P. 62190
Tels (777) 3130092, 3119127
Fax.

NUEVO LEON

Audio Estéreo Aguilar
Gral. Zuazua 736 Nte.
Col. Centro
Monterrey, Nvo. León. C.P. 64000
Tels (81) 83724989, 83755440
Tel/Fax (81) 83755884

Técnica Especializada
Diego Díaz de Berlanga # 206
Col. Residencial Nogalar C.P.66480
San Nicolás de los Garza, Nvo.León.
Tel (81) 86762799 y 80402747
Fax (81) 80402747

Teleservicio Murillo
Pino Suarez # 501 Sur.
Col. Centro
Col. Linares, Nvo León. C.P. 67700
Tel/Fax (821) 2126650

NAYARIT

Electrónica Show
San Luis No. 118 sur
Col. Centro
Tepic, Nay. C.P. 63000
Tel/Fax (311) 2145800

OAXACA

E-Prom Lab.Electrónico
Modesto Díaz No.403
Col. Ricardo Flores Magon, por volcanes
Oaxaca, Oax, C.P.68020
Tel/Fax. (951) 5201189

Telestar
Av. Libertad No. 1557
Col. La Piragua
Tuxtepec, Oaxaca
Tel/Fax (287) 8752544

PUEBLA

Serv, Express Electrónico
Prol. Reforma No. 6908A
Col. La Libertad
Puebla, Pue. C.P. 72130
Tel (222) 2497819
Tel/Fax (222) 2313293

Centro de Servicio P.C.
Av. Independencia Pte. No. 407
Col. Centro
Tehuacan, Puebla C.P. 75700
Tel/Fax (238) 3823835

QUERETARO

Blauton Industrial
Av. Universidad No. 44B
Col. Pathe
Querétaro, Qro. C.P. 76020
Tels (442) 2232266, 2234934
Tel/Fax (442) 2232267

QUINTANA ROO

Electrónica Beta
Av. Sun Yat Chen No. 43 Loc. 4
Col. Centro
Cancun, Q. Roo. C.P. 77508
Tel (998) 8845412
Tel/Fax (998) 8873813

Electrónicos y Mas
Ignacio Zaragoza No. 204-A
Col. Centro. C.P. 77000
Chetumal, Q. Roo
Tels (983) 8326663, 8324622
Fax (983) 8326014

SAN LUIS POTOSI

Electrónica Especializada
Nicolas Zapata # 1015-A
Col. Tequisquiapan
San Luis Potosí, SLP. C.P. 78250
Tel (444) 8176279
Tel/Fax (444) 8176279

Estéreo Car
Negrete No. 612
Col. Centro
Cd. Valles, SLP. C.P. 79000
Tel/Fax (481) 3820651

SINALOA

Serv, Electrónico del Pacífico
Mariano Escobedo No. 1022
Col. Centro
Mazatlán, Sin. C.P. 82000
Tel/Fax (669) 9820155

Reparaciones Electrónicas
J.Jose Rios No. 178 ote.
Col. Miguel Aleman.
Culiacán Sinaloa, C.P. 80200
Tel/Fax (667) 7168132, (667) 7165145

Electrónica Morelos.
Morelos No. 201 ote
Col. Centro.
Los Mochis, Sinaloa. C.P. 81200
Tel/Fax (668) 8120588

SONORA

Wong's Electrónicos
12 de Octubre No.116 Esq.Q.Roo.
Col. San Benito
Hermosillo, Son. C.P. 83180
Tel (662) 2105495
Tel/Fax (662) 2100586

Dasetronik.
Guerrero No. 308-A este.
Col. Centro.
Navojoa, Sonora. C.P. 85800
Tel (642) 4224064
Fax (642) 4213664

Audio video Electrónica
Av. Zaragoza No. 516 pte.
Col. Centro.
Cd. Obregón, Sonora. C.P. 85000
Tel (644) 4143828
Fax (644) 4147575

Electrónica Universal.
Calle 29 Av. Alfonso Iberny No. 401
Col. Centro
Cd. Guaymas, Sonora. C.P. 85400
Tel/Fax (622) 2229411

TABASCO

Elec. Sigma de Tabasco
Av. Gregorio Méndez No. 2819
Col. Atasta
Villahermosa, Tab. C.P. 86100
Tel (993) 3545410
Tel/Fax (993) 3540033

TAMAULIPAS

Electrónica Digital
Independencia No. 112 esq. 11
Col. Centro
Matamoros, Tamps. C.P. 88000
Tel/Fax (868) 8135013

Centro de Servicio Lugo
Rosalinda Guerrero No. 289
Col. Prol. Longoria
Reynosa, Tamps. C.P. 88699
Tel/Fax (899) 9249243

Esp. Electrónicas
Matamoros Poniente 225
Col. Centro
Cd. Victoria, Tamps. C.P. 87000
Tel (834) 3125193
Fax (834) 3125193

Micronics
Calle 10 No. 607.
Col. Jardín 20 de Noviembre
Madero, Tamps. C.P. 89440
Tel (833) 2159689
Fax (833) 2103882

Laboratorio Electrónico
Washington 3142
Col. Juarez (Centro)
Nuevo Laredo, Tamps. C.P. 88000
Tel (867) 7149592
Tel/Fax (867) 7149852

Electrónica Emmanuel
Obregón No. 206 Pte.
Zona Centro
Cd. Mante, Tamaulipas. C.P. 89800
Tel/Fax (831) 2329081

TLAXCALA

Sexel, De Tlaxcala
Av. Revolución No. 33 Local A.
Col. Atenpan
Tlaxcala, Tlax.
Tel/Fax: (246) 462 9660

VERACRUZ

Serv Técnicos Prof.
Av. 13 No. 400 Esq, Calle 4
Col. Bella Vista
Córdoba, Ver. C.P. 94500
Tel (271) 7127322
Fax (271) 7122539

Electrónica Arizona
Acosta No. 9
Zona Centro
Jalapa, Ver. C.P. 91000
Tel (228) 8903561 y 62
Fax

Electrónica Digital
Av. Juárez No. 516
Col. 27 de Septiembre
Poza Rica, Ver. C.P. 93320
Tel (782) 8229899
Tel/Fax (782) 8236849

Electrónica DICA
F. del Paso y Troncoso No. 908
Col. Centro
Veracruz, Ver. C.P. 91700
Tel (229) 9312296
Tel/Fax (229) 9312033

Seguridad Plus.
SUR 15 # 210 ENTRE ORIENTE 4 Y 6
Col. Centro
Orizaba, Ver. C.P.94300
Tel/Fax (272) 7247676

YUCATAN

Servicentro
Calle 70 No. 443 x calle 49 dept.5
Col. Centro
Merida, Yuc. C.P. 97000
Tel (999) 9285428 y 9233997
Tel/Fax (999) 9285905

ZACATECAS

Electrónica Mario.
Mondos Poniente No. 1214
Col. Centro
Zacatecas, Zac. C.P. 98000
Tel/Fax (492) 9227561

Garantie pour le Canada

Thomson multimedia Ltd. garantit à l'acheteur ou au propriétaire du produit que s'il présente un défaut de fabrication dans l'année qui suit la date d'achat originale, le produit sera remplacé gratuitement, frais d'expédition inclus.
La présente garantie n'inclut pas les dommages attribuables à des accidents, à une mauvaise utilisation du produit ou à des piles qui coulent.
Advenant que le produit ne fonctionne pas correctement durant la période de garantie:
1. Le retourner au détaillant avec preuve d'achat pour obtenir un produit de remplacement,
OU
2 Retirer les piles (s'il y a lieu) et emballer le produit, accessoires inclus, dans son carton d'origine (ou l'équivalent).
Expédier par la poste, port payé (avec preuve d'achat) et assuré à:

Thomson multimedia Ltd.
6200 Edwards Blvd.,
Mississauga, Ontario, L5T 2V7
Canada

Les dispositions de la présente garantie s'ajoutent aux garanties statutaires et autres droits et recours prévus par les lois applicables, sans les modifier ou les amoindrir, et dans la mesure où ces dispositions prétendent exclure ou restreindre de telles garanties statutaires et autres droits et recours, ces dispositions seront jugées amendées de manière à être conformes.
Dans l'impossibilité de trouver un service compétent pour effectuer les réparations hors garantie, prière d'écrire à:

Thomson Inc.
P.O. Box 0944
Indianapolis, Indiana, É.U., 46206- 0944

Joindre le coupon de caisse au livret pour référence ultérieure. Cette information est nécessaire pour les réparations requises durant la période de garantie.

DATE D'ACHAT

NOM DU VENDEUR

RCA

POLIZA DE GARANTIA

Comercializadora Thomson de México S.A de C.V. garantiza este producto en todas sus partes y mano de obra, contra cualquier defecto de fabricación y funcionamiento, a partir de la fecha de entrega al cliente final. Bajo el siguiente término:

Producto	Partes	Mano de Obra
Televisores c/cinescopio de 36,6 cm. (14 pulgadas) y menores	2 años cinescopio. 1 año otras partes.	1 año.
Televisores c/cinescopio de 48,3 cm (19 pulgadas) y mayores.	2 años cinescopio. 1 año otras partes.	1 año.
Televisión de Proyección	1 año	1 año
Videocaseteras	1 año	1 año
Videocámaras	1 año	1 año
Equipos de Audio	1 año	1 año
Reproductor de DVD	1 año	1 año
Accesorios	1 año	1 año

CONDICIONES

1. Para ser efectiva esta garantía se requiere presentar esta póliza o factura de compra debidamente sellada y requisitada, junto con el producto en cualquiera de nuestros Centros de Servicios Autorizados, (que se indican en la hoja anexa), o en el lugar donde fué adquirido.
2. Comercializadora Thomson de México se compromete a reparar y/o reponer las piezas y componentes defectuosos sin cargo al consumidor, o en caso de que a criterio de dicha empresa no sea posible la reparación, cambiar por uno nuevo, exactamente del mismo modelo o su similar. Los gastos de transportación dentro de la red de servicios, que se deriven del cumplimiento de esta póliza de garantía, serán cubiertos por Comercializadora Thomson de México S.A de C.V.
3. Todos los productos deberán ser llevados a cualquier Centro de Servicio Autorizado, excepto los televisores con pantalla de 63,5 cm (25 pulgadas) o mas, los cuales serán reparados en el domicilio del cliente.
4. El tiempo de reparación en ningún caso será mayor a 30 días, contados a partir de la recepción del producto en el Centro de Servicio Autorizado.
5. Para la adquisición de partes y accesorios, contactar al 01-800-1117221 o acudir a Comercializadora Thomson de México.

NOTAS:
En caso de extravío de la póliza, el consumidor podrá recurrir a su distribuidor para su reposición, previa presentación de la factura o nota de compra.

Para su comodidad, solicite informes sobre la localización del Centro de Servicio Autorizado mas cercano a su domicilio, llamando al:
01-800-1117221

No. de Póliza: _____

Comercializadora Thomson de México S. A de C.V
Álvaro Obregón No. 151. Piso 13, Col. Roma.
México, D.F. C.P. 06700; Apartado Postal 41-540

DATOS DEL PRODUCTO

PRODUCTO: Reproductor personal de CD

MODELO: RP2700 **NO.DE SERIE** _____

DATOS DEL CLIENTE

EXPEDIDA A: _____

DIRECCION: _____

_____

NOMBRE: _____

DIRECCION: _____

_____

FECHA DE COMPRA: _____
SELLO Y FIRMA DEL VENDEDOR

ESTA GARANTIA NO TIENE VALIDEZ EN LOS SIGUIENTES CASOS

- Cuando el producto se hubiese utilizado en condiciones distintas a las normales.
- Cuando el producto no hubiese sido operado de acuerdo al instructivo de uso que se le acompaña.
- Cuando el producto hubiese sido alterado o reparado por personas no autorizadas por Comercializadora Thomson de México S.A de C.V.